The Billboard



 
* Sign blanks/panels not included ** Can be filled with sand

The Billboard[™]

OUTSIDE DIMENSIONS : 58"H x 39"W x 3.12"D DIMENSIONS OF RECESSED AREA: 46.75"H x 36.25"W WEIGHT: 45 lbs. COLORS: White, Black, Custom Colors Available **6 SIGNS PER FRAME**

Main Signs Insertion Instructions:





- 1. Slide 36" x 48" sign down through the tabs
- 2. ... until sign rest on ground



4. Slide sign down



36" Main Signs **3**/4' • top slot ····· Holds Signs 36"W x 48"H Visual Area of 48' Sign 36" x 46.75"

Sand Ballasting Instructions

of filling.

There is two holes for filling the sign frame with sand.

Remove plug from hole, fill with

the sand at the bottom of the frame. 5 lbs. of sand per hole is

sand and then replace plug. Shake the sign frame to evenly distribute


recommended, for a total of 10 lbs.

Play sand is suggested for ease



Stabilizing Bar

Use the Stabilizing Bar to prevent the spreading of the sign faces too far.

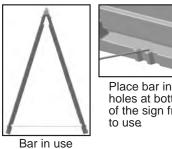

Top Rider Insertion Instructions:

Insert Top Rider Before Inserting Side Signs


Stand the frame on the ground, spreading open the sign faces only half way. Place the Sign Rider in the opening at the top between the sign faces Now, move the sign faces apart until fully extended.

You may want to cut a hole in the rider to make the handle accessible

Side Signs Insertion Instructions:

A cutting template is available at plasticade.com. Holds signs up to 1/4" thick.

If using corrugated plastic sheet for side signs, cut so flutes run horizontal to ground.

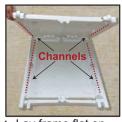

1. Lay frame flat on the ground. Lift up the top sign face.





Slide first Side Sign 2 into top and bottom channels on one side of frame.

4. Insert Stabilizing Bar into hole on bottom and top. Lift up sign frame by the hand to stand upright.




Add A Rider

Slide second Side 3 Sign into top and bottom channels on other side of frame.

 




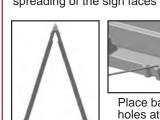







Sand Fill Hols