

INSTALLATION GUIDELINES

Classic Style Standoffs

****Always check the installation surface to ensure that your substrate will be strong enough to hold the weight of the panel. All installation must be done so with proper hardware and protective gear to ensure safety.**

1.) For each standoff, drill the proper hole on the panel. Refer to the panel on the right to use the right size diameter hole.

Once holes are drilled, you can use the panel as a template to determine where on the install surface to drill the necessary holes.

2.) Install wall anchors. Use proper installation hardware:


- Wood Screw with anchor for drywall or plaster
- Toggle Bolt or Masonry Anchor for concrete.

3.) Screw standoff barrels tightly into the wall anchors.
Note: Do NOT overtighten. This could damage the install surface.

4.) Install panel and cap.

IMPORTANT: Make sure all parts are securely tightened.

Hole Size for Panel Mounting	
Standoff	Hole Size
CA1313	3/8"
CA1319	3/8"
CA1919	3/8"
CA1925	7/16"
CA2519	7/16"
CA2525	7/16"
CA2530	7/16"
CA2540	7/16"
CA2550	7/16"

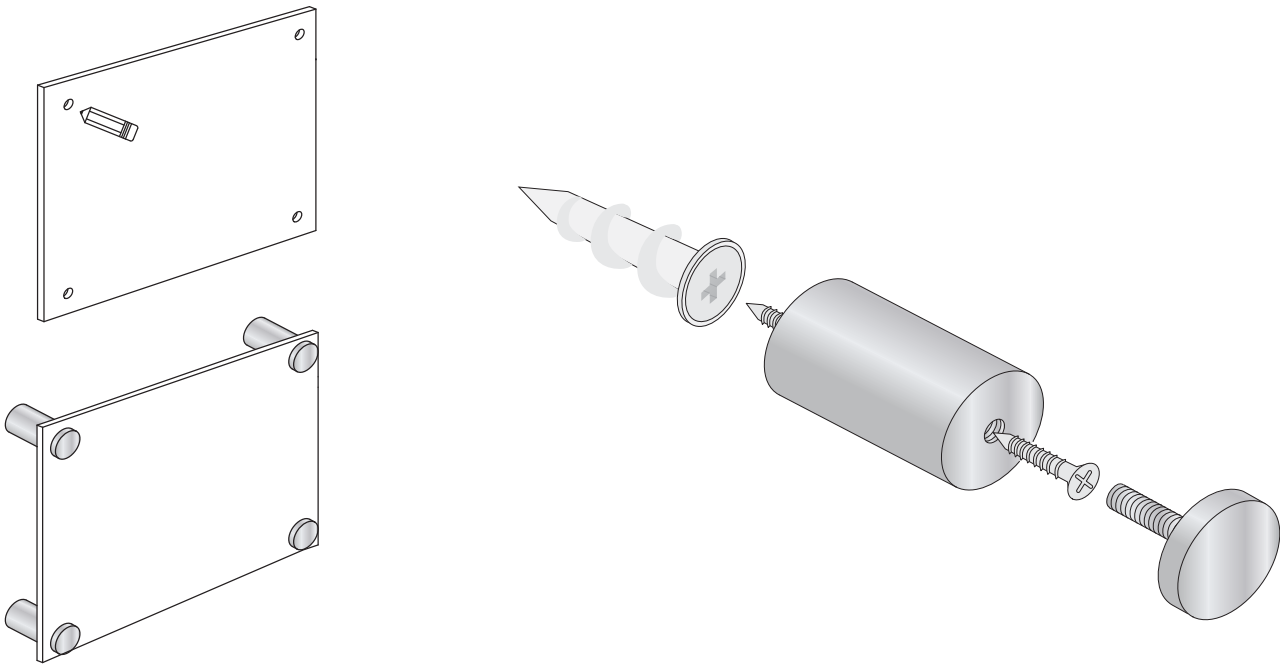

* Installation instructions apply to any of the sizes that are available.

Weight Rating: 65lbs per screw and anchor